



teknek

An ITW Company

Elastomer Roller Warranty

Teknek warrants each elastomer roller sold by it to be free of defects in both material and workmanship under normal use and service for a period of 12 months from the actual date of shipment.

This warranty does not apply to rollers which have been altered, damaged, improperly stored, installed or maintained or subjected to abuse or abnormal operation.

Teknek's liability under this warranty is limited to replacement of defective product. In no event shall Teknek be liable for any collateral, consequential, indirect or incidental damages arising out of or connected in any way with the use or loss of use of any elastomer roller.

This warranty is only valid if:

- Teknek Tekwipes are the only product used for cleaning the rollers
- The rollers have been maintained in accordance with the Teknek maintenance procedure
- Teknek Adhesive Rolls have been used with the elastomer rollers

Do not use solvents or other roller cleaning fluids as this will invalidate the warranty.

Teknek Roller Maintenance

Each Shift

Remove a layer of adhesive at least once a day at the beginning of the shift to maximise particle collection.

Daily to weekly

Clean the elastomer rollers every day or at least once a week using the microfibre Tekwipes.

Weekly


Inspect the elastomer rollers and use the Roller Doctor Pads to remove any visible marks and/or blemishes.

Every 3 months

Perform a deeper cleaning of the elastomer rollers using the Roller Doctor Pads Kit.




Roller maintenance in just
3 easy steps...

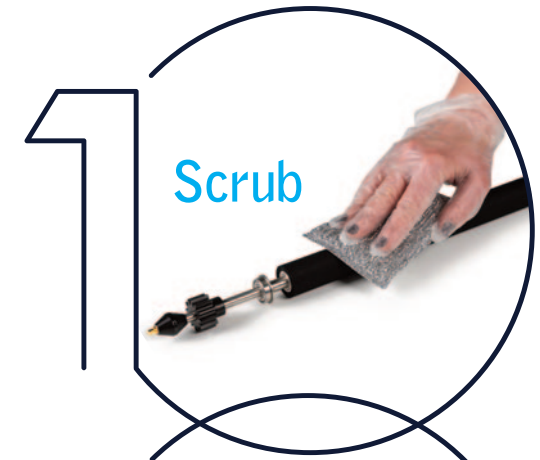

Tekkie tip:

Secure your cleaning roller warranty with this simple maintenance routine

ROLLER DOCTOR 

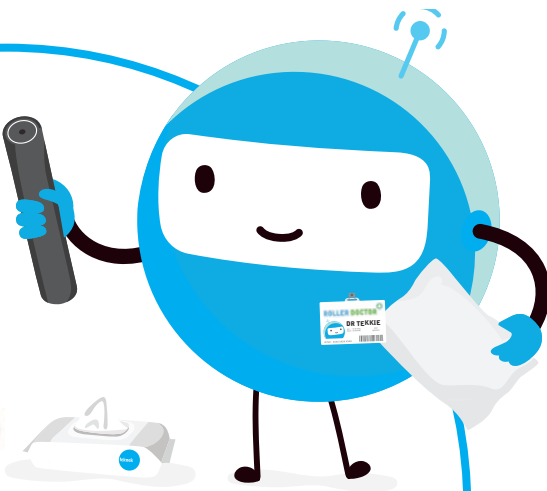

Why not scan the QR code and watch our instructional video?

